

*IBM Network Station Family of Thin Clients*  
Access for today, flexibility for tomorrow



# Network Station Manager V2R1 Internals

August 29, 1999



# Network Station Manager


## NSM Internals

- **NSM / System Structure**
- **Directory Structure**
  - ▶ Server Directories
  - ▶ Shipped Files and Directories
  - ▶ User Data Files and Directories
- **Download Profiles**
  - ▶ Basic Information
  - ▶ Location
  - ▶ File Descriptions
  - ▶ Download Order
  - ▶ Preference Hierarchy
  - ▶ XML Content
  - ▶ Kiosk Templates



# Network Station Manager

## NSM / System Structure

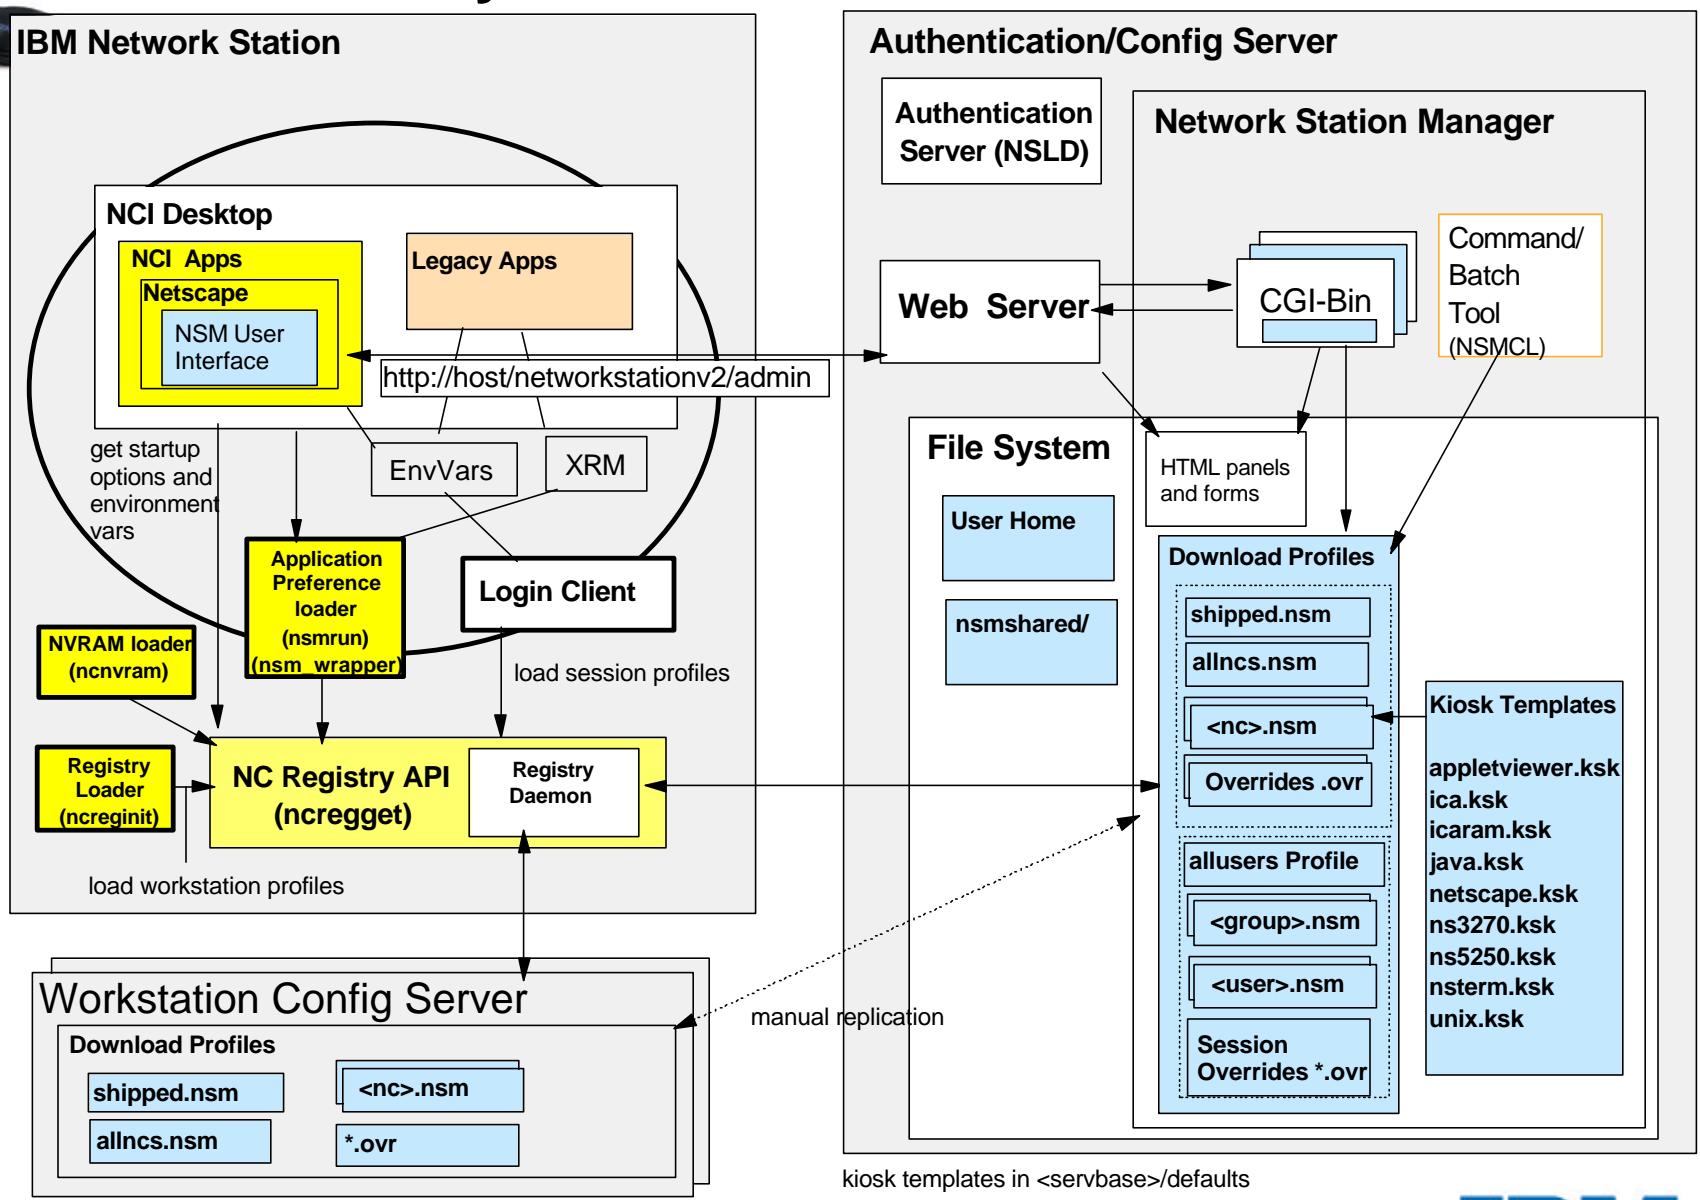



# Network Station Manager

## Directory Structure - Server Directories

Platform	<b>HTTPBASE directory</b>
AS/400	/QIBM/ProdData/HTTP/Protect/NetworkStationV2
Windows NT	X:(float)\NetworkStationV2\servbase\html
AIX	/usr/NetworkStationV2/servbase/html
Platform	<b>PRODBASE directory</b>
AS/400	/QIBM/ProdData/NetworkStationV2
Windows NT	X:(float)\NetworkStationV2\prodbase
AIX	/usr/NetworkStationV2/prodbase
Platform	<b>SERVBASE directory</b>
AS/400	/QIBM/ProdData/NetworkStationV2/nsm
Windows NT	X:(float)\NetworkStationV2\servbase
AIX	/usr/NetworkStationV2/servbase
Platform	<b>USERBASE directory</b>
AS/400	/QIBM/UserData/NetworkStationV2
Windows NT	X:(float)\NetworkStationV2\userbase
AIX	/usr/NetworkStationV2/userbase



# Network Station Manager

## Directory Structure Shipped Files and Directories

Directory	Description
PRODBASE/	Base directory for shipped files
PRODBASE/x86/	Base directory for shipped X86 client files
PRODBASE/ppc/	Base directory for shipped PPC client files
SERVBASE/	Base directory for shipped files used by server programs
SERVBASE/defaults/ shipped.nsm	Directory for NSM shipped defaults Download profile containing backup version of NSM shipped preferences
allusers.nsm	Download profile containing backup version of default system-wide NSM launchbar preferences
allncls.nsm	Download profile containing backup version of default system-wide NSM hardware preferences
<application>.ksk	Kiosk templates
SERVBASE/tmpls/	Directory containing NSM HTML templates (used by the CGIs)
SERVBASE/tmpls/<locale>/	Directory containing language-specific HTML templates
HTTPBASE/	Directory containing NSM HTML files
HTTPBASE/<locale>/	Directory containing language-specific HTML files



# Network Station Manager

## Directory Structure

### User Data Files and Directories

Directory	Description
USERBASE/	Base directory for user data
USERBASE/profiles/	Directory for NSM download profiles
shipped.nsm	NSM shipped profile for all NCs and users
allusers.nsm	NSM managed system-wide profile for all users
allncs.nsm	NSM managed system-wide profile for all NCs
allusers.ovr	System-wide override profile for all users
USERBASE/profiles/NCs/	Directory for NSM terminal specific download profiles
<ncid>.nsm	NSM managed NC specific profile
<ncid>.ovr	NC specific override profile
USERBASE/profiles/users/	Directory for NSM user specific download profiles
<userid>.nsm	NSM managed user specific profile
<userid>.ovr	User specific override profile
USERBASE/profiles/groups/	Directory for NSM group specific download profiles
<groupid>.nsm	NSM managed group specific profile
<groupid>.ovr	Group specific override profile



# Network Station Manager

## Directory Structure

### User Data Files and Directories (continued)

Directory	Description
USERBASE/home/	Network Station home directory
USERBASE/home/<userid>/	User's Network Station home directory
USERBASE/nsmshared/	NSM shared data directory
USERBASE/nsmshared/<userid>/	User's NSM shared data directory
USERBASE/nsmshared/<userid>/NS5250/	User's shared 5250 directory
USERBASE/nsmshared/<userid>/NS3270/	User's shared 3270 directory
USERBASE/nsmshared/<userid>/NSTERM/	User's shared NS Terminal directory
USERBASE/flash/	Directory containing configuration files for the NSM Flash Manager and files to be placed on a flash card image



# Network Station Manager

## Download Profiles

### ■ Basic Information

- ▶ Used to store all NSM-saved preferences
- ▶ Read into the Network Station registry, which is accessed by the OS and all client apps to retrieve preferences
- ▶ Stored in a XML format
- ▶ Encoded in UTF-8 code page

### ■ Location

- ▶ Profiles are accessed by the registry in the server directory **USERBASE/profiles** on the terminal and user configuration servers.
- ▶ Backup copies of shipped default files and kiosk templates are stored in the directory **SERVBASE/defaults**.



# Network Station Manager

## Download Profiles

### ■ Files

#### ► **shipped.nsm**

- located in USERBASE/profiles on terminal config server
- contains shipped default preference values
- should never be edited by a user or administrator
- backup copy in SERVBASE/defaults

#### ► **allncs.nsm**

- located in USERBASE/profiles on terminal config server
- contains system-wide settings for all Network Stations that use the terminal config server
- shipped version of this file contains default values for printers
- backup copy of IBM shipped version in SERVBASE/defaults

#### ► **allusers.nsm**

- located in USERBASE/profiles on user config server
- contains system-wide setting of all users that use the user config server
- shipped version of this file contains the IBM shipped launchbar setup
- back copy of IBM shipped version in SERVBASE/defaults



# Network Station Manager

## Download Profiles

### ■ Files (continued)

#### ▶ <groupid>.nsm

- located in USERBASE/profiles/groups on the user config server
- contains the preferences for the group named <groupid>

#### ▶ <userid>.nsm

- located in USERBASE/profiles/users on the user config server
- contains the preferences for the user named <userid>

#### ▶ <ncid>.nsm

- located in USERBASE/profiles/NCs on the terminal config server
- contains the preferences for the Network Station named <ncid>
- <ncid> can be either the fully qualified domain name, the IP address, or the MAC address of the Network Station

#### ▶ allusers.ovr, <userid>.ovr, <groupid>.ovr, and <ncid>.ovr


- override files for users and Network Stations
- located in the same directories as their corresponding .NSM files
- these can be hand-editted, and are the only files that should be hand-editted
- should only be used if absolutely necessary





# Network Station Manager

## Download Order - Phase 1

Network Station

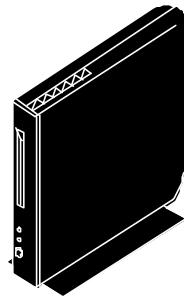

Terminal Config Server

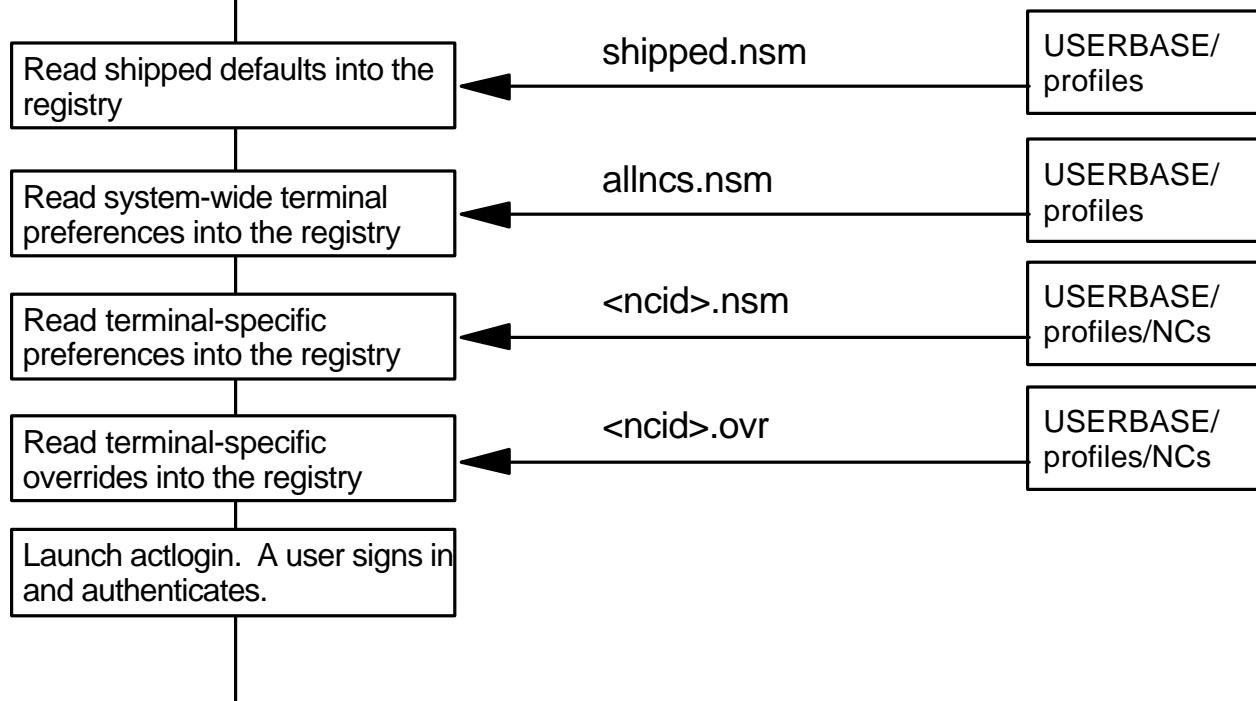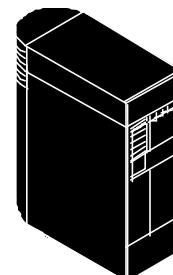






# Network Station Manager

## Download Order - Phase 2

Network Station

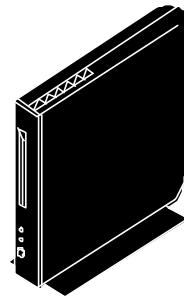

User Config Server

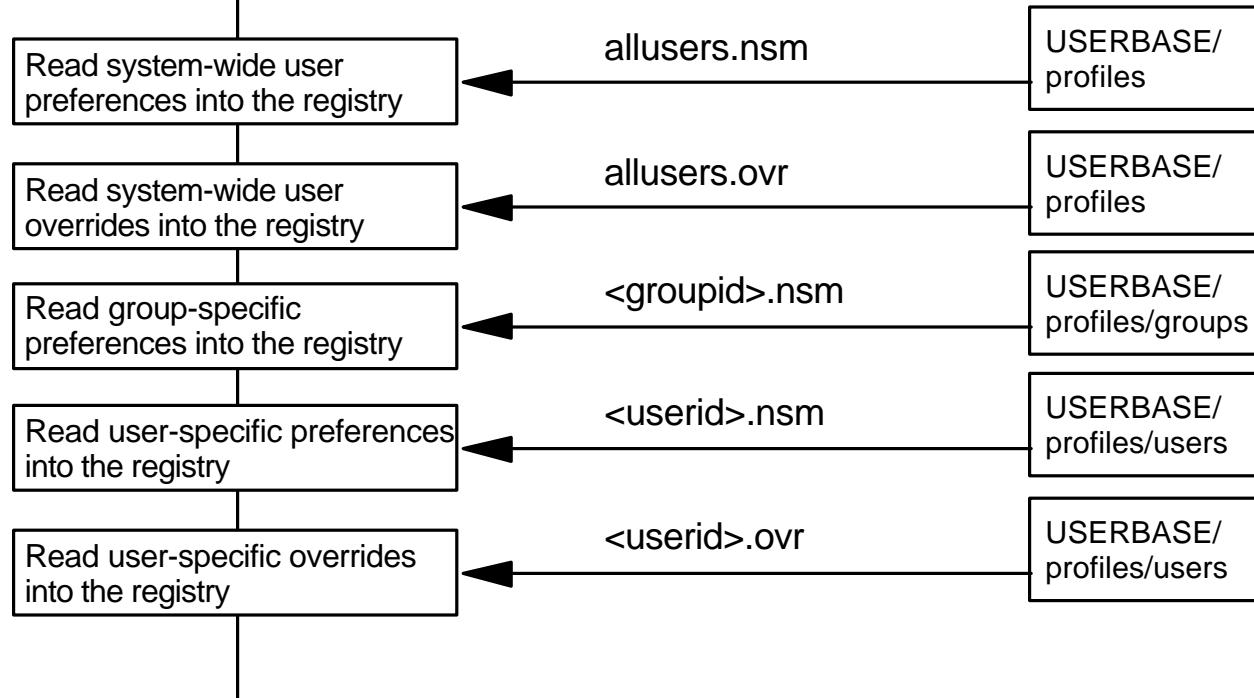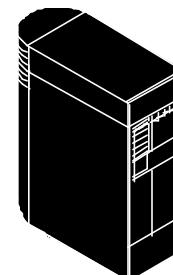



# Network Station Manager


## Download Order - Configuration Values

- **Configuration values that alter the download sequence:**
  - ▶ **RULES preferences (set in the RULES category using the command line utility)**
    - NSM\_ALLOW\_OVERRIDES - if this is DISABLE (the default), override (.ovr) files will not be read.
    - NSM\_NC\_NAME\_TYPE - can be ANY, IP\_ADDRESS, MAC\_ADDRESS, HOST\_NAME. Determines the naming convention for <ncid> files that must be used. ANY (the default) means that any of the three can be used.
    - NSM\_ACCESS\_NC\_CONFIG - if this is DISABLE, <ncid>.nsm and <ncid>.ovr files will not be read.
    - NSM\_ACCESS\_GROUP\_CONFIG - if this is DISABLE, <groupid>.nsm and <groupid>.ovr files will not be read.
    - NSM\_ACCESS\_USER\_CONFIG - if this is DISABLE, <userid>.nsm and <userid>.ovr files will not be read.
  - ▶ **NSM\_KIOSK\_MODE environment variable**
    - If this is "ON", the login panel is bypassed, no authentication is done, and none of the files from the user config server are read.



# Network Station Manager

## Download Profiles - preference hierarchy

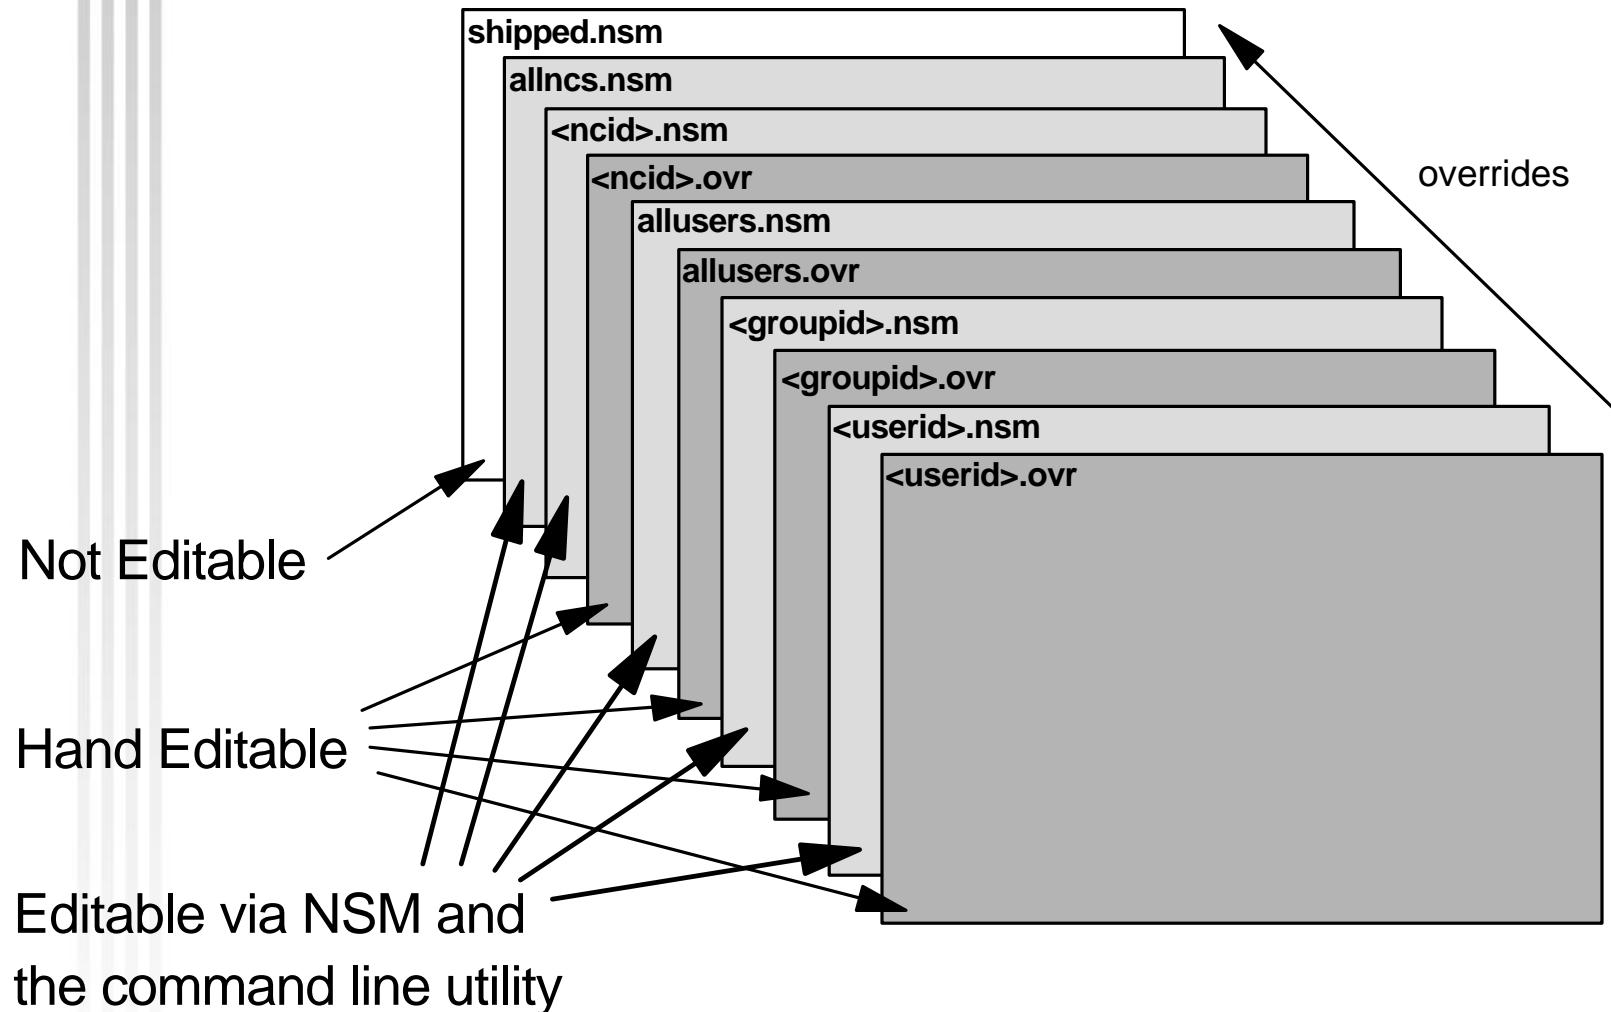



# Network Station Manager

## Download Profiles - XML content - page 1

```
<?xml version="1.0" encoding="UTF-8"?>
<!DOCTYPE NCREGISTRY SYSTEM "registry.dtd" >
<NCREGISTRY VERSION="1.0">
<PACKAGE NAME="/desktops/default">
<CATEGORY NAME="LAUNCHBAR">
<ITEM NAME="5250-5250-user-1">
<FIELD NAME="nsm_type">5250</FIELD>
<FIELD NAME="name"></FIELD>
<FIELD NAME="resource">5250</FIELD>
<FIELD NAME="normal_icon">5250n.xpm</FIELD>
<FIELD NAME="active_icon">5250a.xpm</FIELD>
<FIELD NAME="highlight_icon">5250h.xpm</FIELD>
<FIELD NAME="pressed_icon">5250p.xpm</FIELD>
<FIELD NAME="minimized_icon">5250m.xpm</FIELD>
<FIELD NAME="icon_priority">292</FIELD>
<FIELD NAME="type">application/native-module</FIELD>
<FIELD NAME="command">nsm_wrapper ns5250</FIELD>
<FIELD NAME="kill_priority">4</FIELD>
<FIELD NAME="activate_class">no</FIELD>
<FIELD NAME="x11_class">NS5250</FIELD>
<FIELD NAME="memory_size">3072</FIELD>
<FIELD NAME="save_size">no</FIELD>
<FIELD NAME="save_position">no</FIELD>
</ITEM>
</CATEGORY>
</PACKAGE>
<PACKAGE NAME="/startup">
<CATEGORY NAME="STARTUP">
</CATEGORY>
</PACKAGE>
```

Header  
Package Start

Category Start

Fields

Item End

Category End

Package End



# Network Station Manager

## Download Profiles - XML content - page 2

```
<OBJECT NAME="/login/session">           ← Object Start
<CATEGORY NAME="ENVVARS">                ← Category Start
<PROPERTY NAME="commands" TYPE="LIST" ACTION="APPEND">   ← List Property Start
<ELEMENT>
<FIELD NAME="SET">SET</FIELD>          ← Element Start
<FIELD NAME="arg1">ENVVAR1</FIELD>
<FIELD NAME="arg2">VALUE1</FIELD>
</ELEMENT>
</PROPERTY>                            ← Element End
</CATEGORY>                            ← List Property End
<CATEGORY NAME="HLOGIN">
</CATEGORY>
</OBJECT>                                ← Object End
<OBJECT NAME="/config">
<CATEGORY NAME="WORKSTATION">
<PROPERTY
NAME="pref-mouse-arrangement">right-handed</PROPERTY>   ← String
</CATEGORY>                                ← Property
</OBJECT>
</NCREGISTRY>                           ← End of XML file
```



# Network Station Manager

## Kiosk Templates

### ■ Basic Information

- ▶ Application-specific download profile templates
- ▶ Bring up a single application instance, bypass the login panel
- ▶ Located in SERVBASE/defaults and named <appname>.ksk
- ▶ To use a template, copy it to USERBASE/profiles/NCs and name it <ncid>.nsm or <ncid>.ovr
- ▶ Some templates require editing before they can be used

### ■ Shipped Templates

- ▶ appletviewer.ksk - Java Applet
- ▶ ica.ksk - ICA Connection
- ▶ icaram.ksk - ICA Remote Application Manager
- ▶ java.ksk - Java Application
- ▶ netscape.ksk - Netscape Browser
- ▶ ns3270.ksk - 3270 Emulator
- ▶ ns5250.ksk - 5250 Emulator
- ▶ nsterm.ksk - VT Emulator
- ▶ unix.ksk - XTerm



# Network Station Manager

## Netscape Kiosk Template - page 1

```
<?xml version="1.0" encoding="UTF-8"?>
<!DOCTYPE NCREGISTRY SYSTEM "ncregistry.dtd" >
<!-- Netscape Sample Profile for Single Application (kiosk) Mode -->
<NCREGISTRY>
<OBJECT NAME="/config">
<CATEGORY NAME="WORKSTATION">
<PROPERTY NAME="pref-screen-background-color">black</PROPERTY>
</CATEGORY>
</OBJECT>
<OBJECT NAME="/desktop/preferences">
<CATEGORY NAME="DESKTOP">
<PROPERTY NAME="desktop_command">run_netscape</PROPERTY>
<PROPERTY NAME="lock_screen">no</PROPERTY>
</CATEGORY>
</OBJECT>
<OBJECT NAME="/login/session">
<CATEGORY NAME="KIOSK">
<PROPERTY NAME="commands" TYPE="LIST" ACTION="APPEND">
<ELEMENT>
<FIELD NAME="op">SET</FIELD>
<FIELD NAME="arg1">NSM_KIOSK_MODE</FIELD>
<FIELD NAME="arg2">ON</FIELD>
</ELEMENT>
</PROPERTY>
</CATEGORY>
```



# Network Station Manager

## Netscape Kiosk Template - page 2

```
<CATEGORY NAME="INTERNET">
<PROPERTY NAME="Commands" TYPE="LIST" ACTION="APPEND">
<ELEMENT>
<FIELD NAME="op">SET</FIELD>
<FIELD NAME="arg1">FTP_PROXY_HOST</FIELD>
<FIELD NAME="arg2">yourproxy.server.com</FIELD>
</ELEMENT>
<ELEMENT>
<FIELD NAME="op">SET</FIELD>
<FIELD NAME="arg1">FTP_PROXY_PORT</FIELD>
<FIELD NAME="arg2">81</FIELD>
</ELEMENT>
<ELEMENT>
<FIELD NAME="op">SET</FIELD>
<FIELD NAME="arg1">FTP_PROXY_OVERRIDES</FIELD>
<FIELD NAME="arg2"></FIELD>
</ELEMENT>
<ELEMENT>
<FIELD NAME="op">SET</FIELD>
<FIELD NAME="arg1">GOPHER_PROXY_HOST</FIELD>
<FIELD NAME="arg2">yourproxy.server.com</FIELD>
</ELEMENT>
<ELEMENT>
<FIELD NAME="op">SET</FIELD>
<FIELD NAME="arg1">GOPHER_PROXY_PORT</FIELD>
<FIELD NAME="arg2">81</FIELD>
</ELEMENT>
<ELEMENT>
<FIELD NAME="op">SET</FIELD>
<FIELD NAME="arg1">GOPHER_PROXY_OVERRIDES</FIELD>
<FIELD NAME="arg2"></FIELD>
</ELEMENT>
```



# Network Station Manager

## Netscape Kiosk Template - page 3

```
<ELEMENT>
<FIELD NAME="op">SET</FIELD>
<FIELD NAME="arg1">HTTP_PROXY_HOST</FIELD>
<FIELD NAME="arg2">yourproxy.server.com</FIELD>
</ELEMENT>
<ELEMENT>
<FIELD NAME="op">SET</FIELD>
<FIELD NAME="arg1">HTTP_PROXY_PORT</FIELD>
<FIELD NAME="arg2">81</FIELD>
</ELEMENT>
<ELEMENT>
<FIELD NAME="op">SET</FIELD>
<FIELD NAME="arg1">HTTP_PROXY_OVERRIDES</FIELD>
<FIELD NAME="arg2"></FIELD>
</ELEMENT>
<ELEMENT>
<FIELD NAME="op">SET</FIELD>
<FIELD NAME="arg1">HTTPS_PROXY_HOST</FIELD>
<FIELD NAME="arg2">yourproxy.rchland.ibm.com</FIELD>
</ELEMENT>
<ELEMENT>
<FIELD NAME="op">SET</FIELD>
<FIELD NAME="arg1">HTTPS_PROXY_PORT</FIELD>
<FIELD NAME="arg2">81</FIELD>
</ELEMENT>
<ELEMENT>
<FIELD NAME="op">SET</FIELD>
<FIELD NAME="arg1">SOCKS_HOST</FIELD>
<FIELD NAME="arg2"></FIELD>
</ELEMENT>
```

```
<ELEMENT>
<FIELD NAME="op">SET</FIELD>
<FIELD NAME="arg1">SOCKS_PORT</FIELD>
<FIELD NAME="arg2"></FIELD>
</ELEMENT>
<ELEMENT>
<FIELD NAME="op">SET</FIELD>
<FIELD NAME="arg1">HOME_PAGE</FIELD>
<FIELD
NAME="arg2">http://www.ibm.com/</FIELD>
</ELEMENT>
</PROPERTY>
</CATEGORY>
</OBJECT>
</NCREGISTRY>
```