

MODEM BOARD PROGRAMMING COMMANDS

COMMAND	FUNCTION
A	Switches modem to the Answer mode.
*	Opens modem for programming.
@	Stand by to receive a new Abort code.
C	Clears (resets) modem memory.
D	Clears current telephone number from memory. Must precede any new telephone number.
E	Toggle the Echo enable switch.
F	Fast rotary dialing (20 pps).
L	Transmits (displays) current contents of modem memory to the computer (terminal).
M	Toggles the Manual/Automatic switch.
O	Switches the modem to the Originate mode.
P	Inserts a two-second pause in dialing sequence.
Q	Puts modem into LOCal Test Mode.
R	Rotary dialing (default value).
S	Slow rotary dialing (10 pps) (default value)
T	Tone dialing (10 digits per second).
X	Executes current program (dials the phone number in memory).
BACKSPACE	Erase the last code entered when programming dialing information.
(,), or -	Insert a user space when programming dialing information.

(abo-07/28/93)